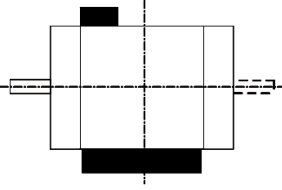
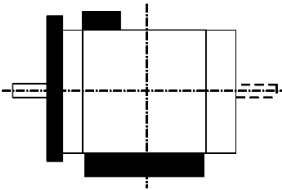
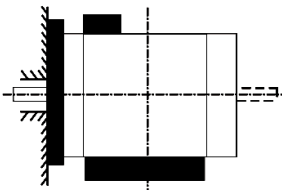
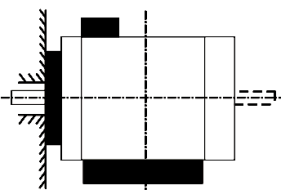
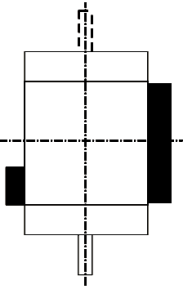
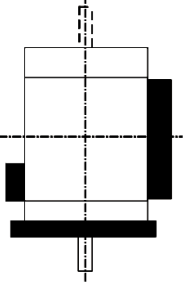
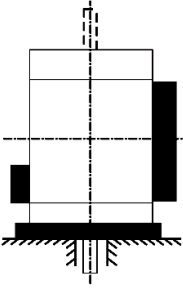
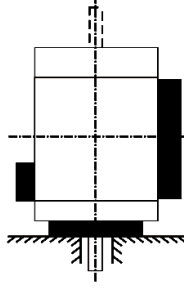
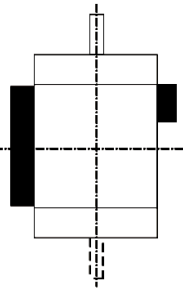
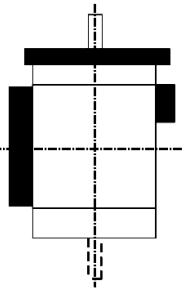
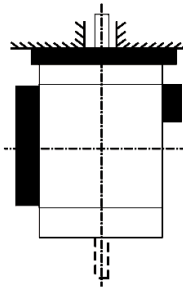
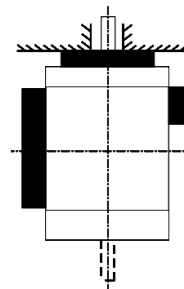
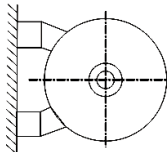
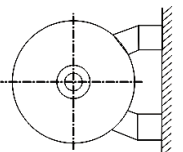
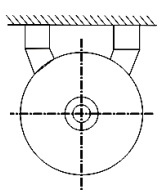
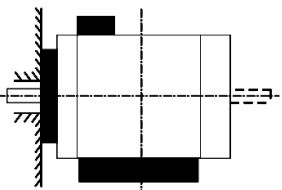
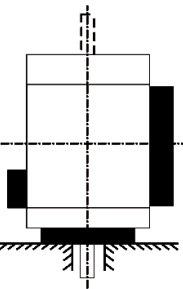


Наиболее используемые способы монтажа указаны в нижеприведённой таблице

<p>IM 1001, IM 1002</p> 	<p>IM 2001, IM 2002</p> 	<p>IM 3001, IM 3002</p> 	<p>IM 3601, IM 3602</p> 
<p>IM 1011, IM 1012</p> 	<p>IM 2011, IM 2012</p> 	<p>IM 3011, IM 3012</p> 	<p>IM 3611, IM 3612</p> 
<p>IM 1031, IM 1032</p> 	<p>IM 2031, IM 2032</p> 	<p>IM 3031, IM 3032</p> 	<p>IM 3631, IM 3632</p> 
<p>IM 1051, IM 1052</p> 	<p>IM 2061, IM 2062</p> 	<p>IM 3071, IM 3072</p> 	
<p>IM 2101, IM 2102</p> 	<p>IM 2111, IM 2112</p> 	<p>IM 3071, IM 3072</p> 